


Creating Water Jet Files:

Step 3 Make:


- 1) Launch Make Software.
- 2) Open Your ****_imported_dxf.omx file
- 3) OK

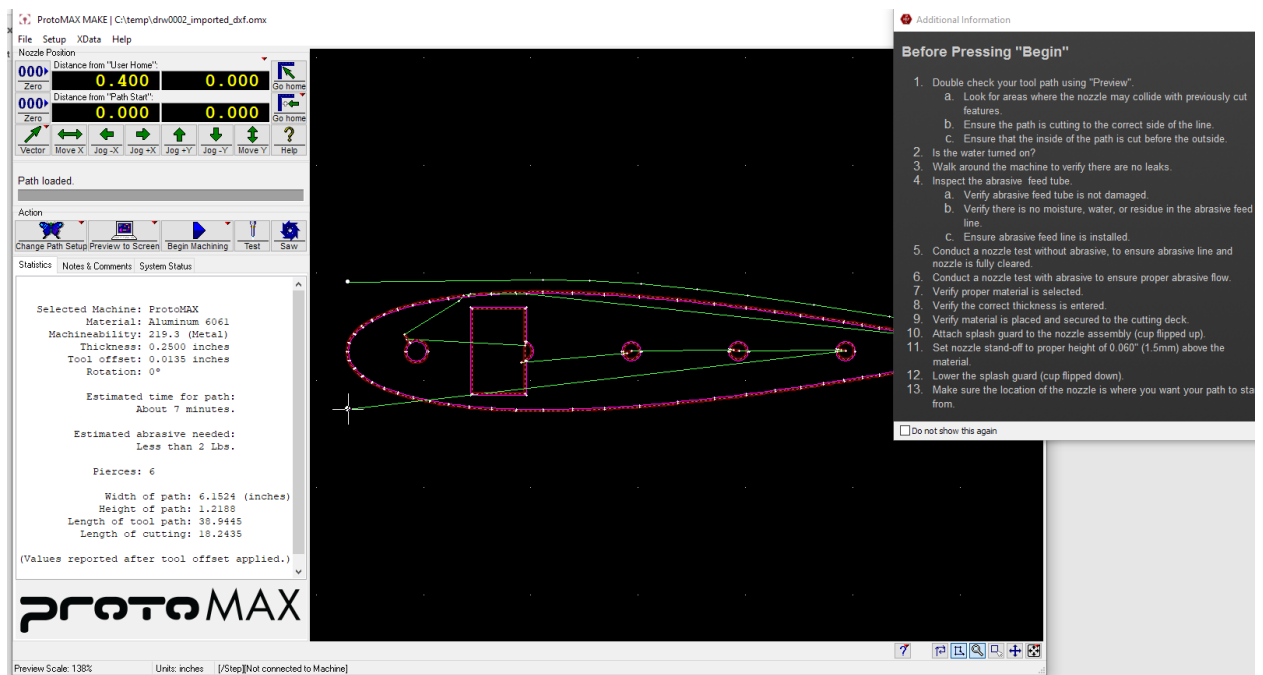

- 4) Pick the Change Path setup tab.



5) Fill in the proper material and thickness.

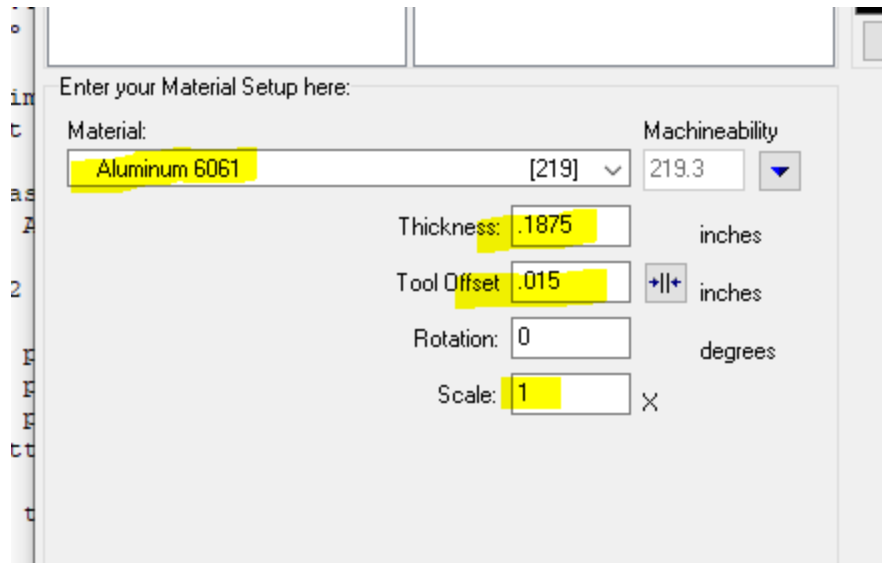

Also: Make sure that your Tool Offset is .015” if you are cutting along the sketch and leaving the line (preferred). If you want to cut the sketch on the line, fill in 0.0”. Using 0.0” will cut on the line creating a cut of .015” on each side of the line due to the nozzle cutting width.

6) Continue to “MAE Water Jet” Guide.